

## HOW TO REMOVE THE DETACHABLE EXTERIOR ZIPPED POCKET



You will find the screws attaching the pocket to the case within the pocket once it is unzipped.

The screws can be turned by hand anti-clockwise and removed from the retainers, (please keep these screws).



Once all screws have been taken out you will then be able to detach the pocket from the case.



With the pocket now detached please replace the screws back by turning clockwise into the retainers on the outside of the case.

These instructions are for the following cases

- VNPC1** Violin Oblong
- VNPC2** Violin Halfmoon
- VNPC3** Violin Gourd
- VAPC1** Viola Oblong